


WT 10


- Feed-through block with screw connection for mounting on TS 35
- Nominal cross section 10 mm²
- Max. electrical data: 76 A / 16 mm²
- Connection capacity: 2 wires, equal size 0.5 – 6 mm²

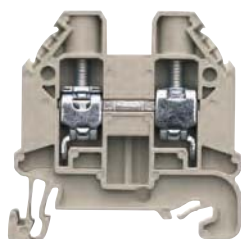

Description	Type	Part No.	Std. Pack
Feed-through block, gray	WT 10	58.510.0055.0	50
Feed-through block, blue	WT 10 BL	58.510.0055.6	50
General data			
Width / length / height, incl. TS 7.5	10 mm / 48 mm / 48 mm		
Wire strip length	13 mm		
Approvals			
Technical data			
	IEC	UL	CSA
	EN 60 947-7-1		
Cross section fine-stranded	0.5–16 mm ²		pending
Cross section solid/stranded	0.5–16 mm ²		
Cross section, AWG		20–6	
Rated current	57 A	65 A	
Rated voltage	1000 V	600 V	
Rated impulse voltage	8 kV		
Pollution degree	3		
Accessories			
	Type	Part No.	Std. Pack
End plate	AP WT 2,5-10	07.313.2555.0	10
Cross connector	2 pole IVB WKF 10-2	Z7.283.8227.0	10

WT 16

- Feed-through block with screw connection for mounting on TS 35
- Nominal cross section 16 mm²
- Max. electrical data: 101 A / 25 mm²
- Connection capacity: 2 wires, equal size 2.5 – 10 mm²

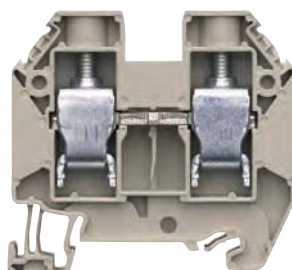

Description	Type	Part No.	Std. Pack
Feed-through block, gray	WT 16	58.516.0055.0	50
Feed-through block, blue	WT 16 BLAU	58.516.0055.6	50
General data			
Width / length / height, incl. TS 7.5	12 mm / 58 mm / 54mm		
Wire strip length	15 mm		
Approvals			
Technical data			
	IEC	UL	CSA
	EN 60 947-7-1		
Cross section fine-stranded	4–25 mm ²		pending
Cross section solid/stranded	1.5–25 mm ²		
Cross section, AWG		16–4	16–4
Rated current	76 A	85 A	85 A
Rated voltage	1000 V	600 V	600 V
Rated impulse voltage	8 kV		
Pollution degree	3		
Accessories			
	Type	Part No.	Std. Pack
End plate	AP WT 16	07.313.2755.0	10
Cross connector	2 pole IVB WKF 16-2	Z7.284.4227.0	10

Accessories for *selos* WT 2,5 – WT 16



Accessories	Type	Part No.	Std. Pack
Cover with warning symbol	for WT 2,5	AD WT 2,5	04.344.1455.8
	for WT 4	AD WT 4	04.344.1655.8
	for WT 6	AD WT 6/10	04.344.1855.8
	for WT 10	AD WT 6/10	04.344.1855.8
	for WT 16	AD WT 16	04.344.2255.8
Partition for WT 2,5 – WT 10	TW WT 2,5-10	07.313.2655.0	10
Partition for WT 16	TW WT 4E	07.313.2855.0	10
Test adapter modular for WT 2,5 and 4	PS WKC/F	Z1.299.9753.0	10
End plate for test adapter *	ZP/AP PS	07.312.6053.0	10

* for WT4 an end cover plate must be snapped in after each test connector